


## Quick reference (“Start” screen)

To display the “Start” screen, push the “MENU” button on the Remote Touch.

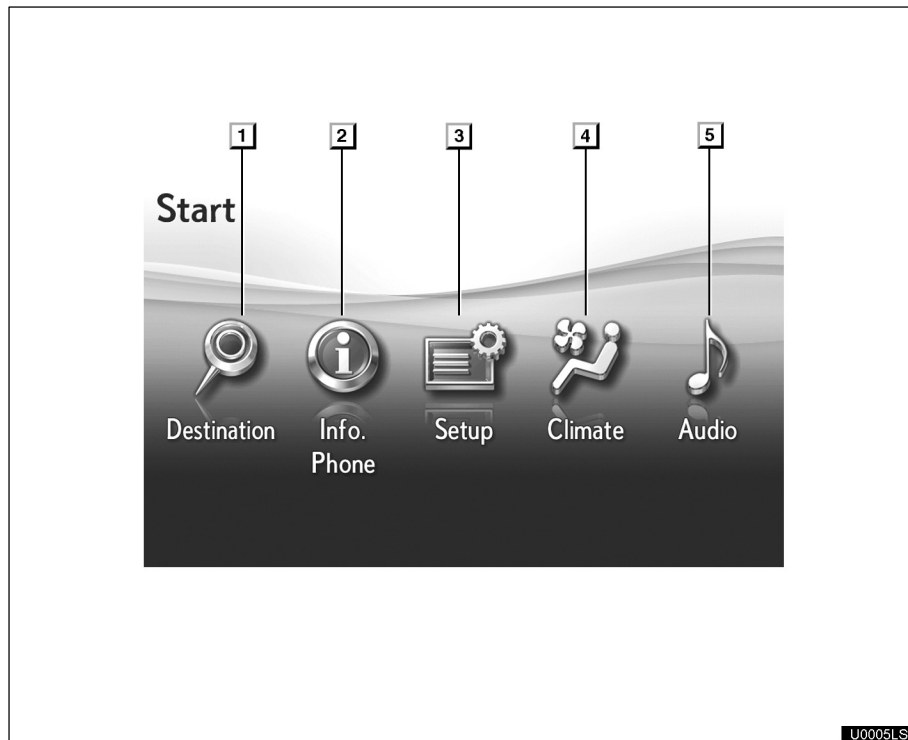

### 1 “Destination”

You can use one of 10 different methods to search your destination. .... 18, 67

### 2 “Info./Phone”

Select this button to operate the hands-free system and display fuel economy information, etc. .... 21, 135

### 3 “Setup”

Select this button to adjust settings of the navigation, audio and hands-free systems, etc. .... 20, 311

### 4 “Climate”


Select this button to operate the air conditioning system. .... 275

### 5 “Audio”

Select this button to operate the audio system. .... 185

Quick reference (“Destination” screen)

The “Destination” screen allows you to search for a destination. To display the “Destination” screen, push the “MENU” button on the Remote Touch, then select “Destination”.

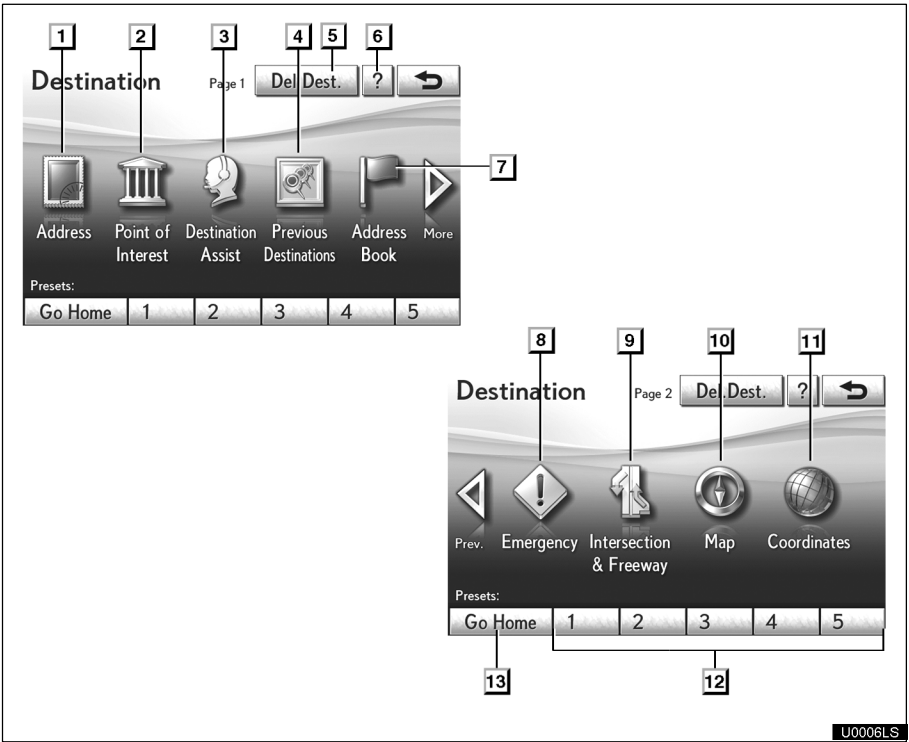

<b>1 “Address”</b>	
A house number and the street address can be input by using the input keys. ....	71
<b>2 “Point of Interest”</b>	
Select one of the many Points of Interest that have already been stored in the system’s database. ....	75
<b>3 “Destination Assist”</b>	
Provides you with live assistance finding destinations via the Lexus Enform response center ....	161
<b>4 “Previous Destinations”</b>	
A destination can be selected from any of the last 100 previously set destinations and from the previous starting point. ....	82
<b>5 “Del. Dest.”</b>	
Set destinations can be deleted. ....	88
<b>6 “?”</b>	
Function help for the “Destination” screen can be viewed on this screen. ....	39

**7 “Address Book”**

The desired location can be selected from a registered entry in the “Address book”. (To register address book entries, see “(a) Registering address book entries” on page 123.)

..... 83

**8 “Emergency”**

One of the four categories of emergency service points that are already stored in the system’s database can be selected.

..... 83

**9 “Intersection & Freeway”**

The names of two intersecting streets or a freeway (interstate) entrance or exit can be entered. This is helpful if only the general vicinity, not the specific address, is known.

..... 84

**10 “Map”**

A destination can be selected simply by selecting the location on the displayed map. .... 87

**11 “Coordinates”**

A destination can be set using latitudes and longitudes as coordinates. .... 88

**12 Preset destination buttons**

One of 5 preset destination points can be selected by selecting the screen directly. If a preset destination point has not been registered, a message will be displayed and the setting screen will automatically appear. To use this function, it is necessary to set the “preset destination”. (To register a “Preset Destination”, see “(a) Registering preset destinations” on page 120.) ..... 70


**13 “Go Home”**

A personal home address can be selected without entering the address each time. If “Home” has not been registered, a message will be displayed and the setting screen will automatically appear. To use this function, it is necessary to set a “Home” address. (To register “Home”, see “(a) Registering home” on page 117.)

..... 70

## Quick reference (“Setup” screen)

The items shown on the “Setup” screen can be set. To display the “Setup” screen, push the “MENU” button on the Remote Touch, then select “Setup”.

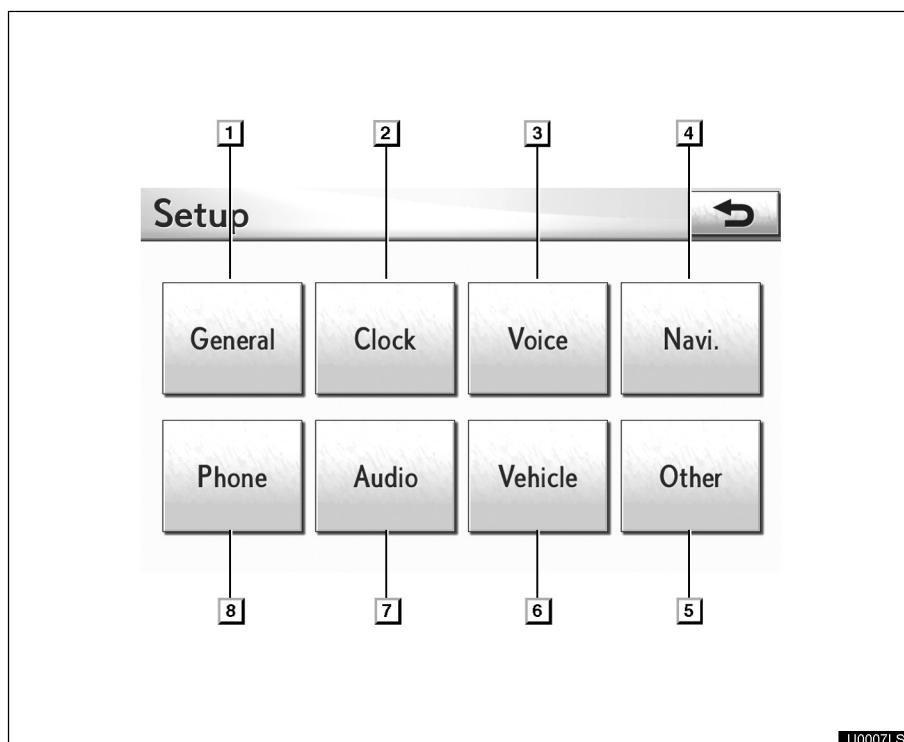

### 1 “General”

Settings are available for language selection, operation sounds, automatic screen change, etc. . . . . 312

### 2 “Clock”

Used for changing settings for time zones, daylight saving time, etc. . . . . 318

### 3 “Voice”

Voice guidance can be set. . . . . 321

### 4 “Navi.”

Settings are available for average cruising speed, displayed screen contents, POI icon categories, etc. . . . . 324

### 5 “Other”

Settings are available for Lexus Insider, XM® Sports and Stocks. . . . . 388

### 6 “Vehicle”

Settings are available for vehicle information such as maintenance information. . . . . 380

### 7 “Audio”


Settings are available for portable audio devices, Bluetooth® audio devices etc. . . . . 373

### 8 “Phone”

Bluetooth® phones and phone numbers can be registered, and the receiver volume can be adjusted. . . . . 334

## Quick reference (“Information” screen)

This screen can be used to display the calendar and information on operation of the hands-free phone, etc. To display the “Information” screen, push the **“MENU”** button on the Remote Touch, then select **“Info./Phone”**.

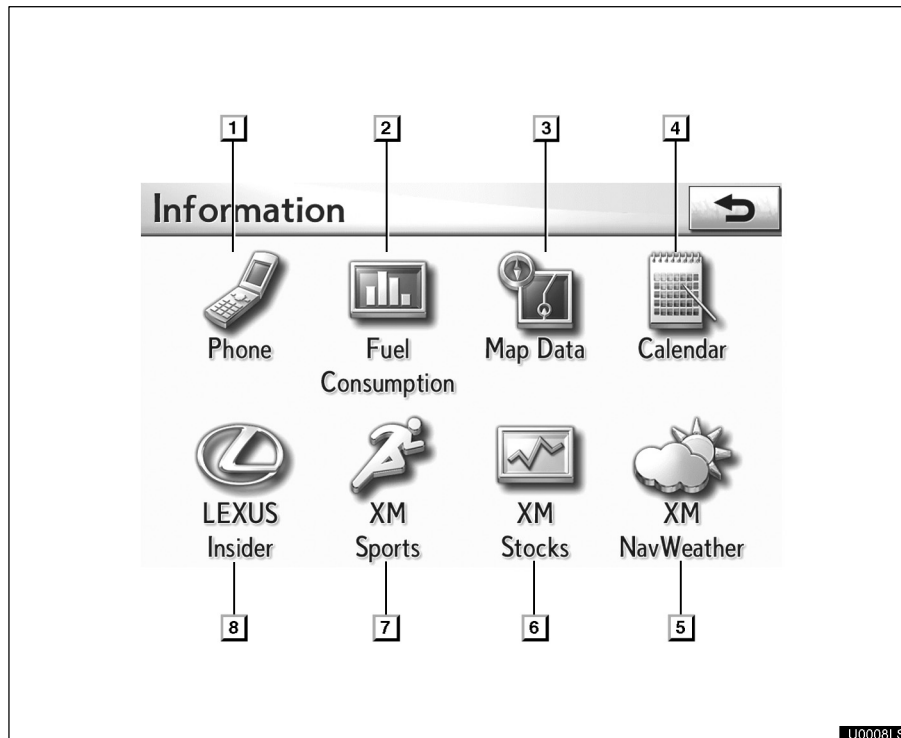

<b>1 “Phone”</b>	To view hands free phone information. ..... 140	<b>5 “XM NavWeather”</b>	To display the “XM NavWeather” screen. ..... 173
<b>2 “Fuel Consumption”</b>	Fuel consumption is displayed. .... 155	<b>6 “XM Stocks”</b>	To display the “XM Stocks” screen. ..... 167
<b>3 “Map Data”</b>	Displays information regarding the map data disc version or coverage area. ..... 403	<b>7 “XM Sports”</b>	To display the “XM Sports” screen. ..... 167
<b>4 “Calendar”</b>	To view calendar. .... 156	<b>8 “LEXUS Insider”</b>	To display the “LEXUS Insider” screen. ..... 179